


## Door cut out template / Gabarit de découpe pour la porte

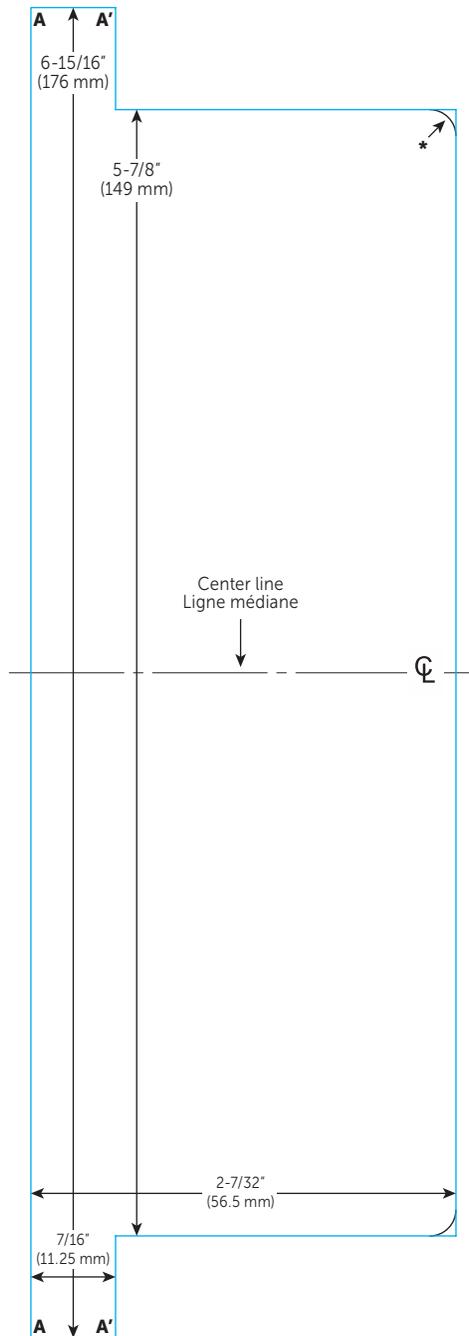

1. Align center line with the center line on the door face.
  2. Using a sharp pencil, draw around the edge of the template. Square lines marked A A' across front edge of door.
  3. Cut out the door keeping to the lines marked. Take special care with the cut out on the front edge of the door as this will be visible when handle is fitted.
- \* Cut the template out with either a sharp internal corner or radius of  $1/4"$  (6 mm) or less as shown in diagram.
1. Aligner la ligne médiane du gabarit avec la ligne médiane tracée sur la façade de la porte.
  2. Prendre un crayon bien aiguisé et tracer le contour du gabarit ainsi que les lignes carrées A et A' sur le rebord de la porte.
  3. Procéder à la découpe de la porte en respectant le contour tracé. Être particulièrement attentif à la découpe du rebord de la porte, car cette partie sera visible une fois la poignée installée.
- \* Procéder à la découpe en faisant des coins intérieurs carrés ou avec un rayon de  $1/4$  po (6 mm), comme montré sur le schéma.